

SureStrike™ replacement Cap User Guide:

SureStrike replacement Cap reloads your training system with another minimum of 5,000 shots.

Step 1:

Unscrew the back and front end of your laser bullet and separate them. Keep your battery.



Step 2:

Discard old cap. Replace old cap with new cap. Insert the battery pack into the laser bullet according to the drawing.



Step 3:

Reassemble your laser bullet carefully. Proceed to load the bullet into your gun as instructed in the SureStrike user steps 3 – 8.



* We strongly recommend that the battery be removed when the laser bullet is not in use to prolong your battery's life