

Smokeless Range Quick Start Guide

*Use with TV or monitor will require an optional filter material.

1. Make sure your computer meets these requirements:
 - Windows 7, 8.1 or 10 PC (PC more than 4 years old may not be able to run software)
 - Processor: 2GHz Dual Core or better (AMD or Intel)
 - Processor Note: To track Laser Ammo Airsoft Recoil Laser, must use an Intel i3 or better
 - Memory: 2GB RAM DDR2 or more
 - Memory Note: To track Laser Ammo Airsoft Recoil Laser, must have 4GB or more
 - Graphics: Intel HD or better (Must support 1280x720 resolution)
 - Disk Space: 500MB or more
 - USB 2.0 port
 - HDMI or VGA port for TV or projector connection
 - USB cannot be used to connect PC to Projector

2. Download the Smokeless Range software from: www.SmokelessDownload.com

3. Run the downloaded SmokelessInstall.exe

4. Watch the “Smokeless Range Setup” video that plays at the end of the software install. Ensure that your computer and system is setup as described in the video.

*This setup video can be watched again by clicking on the blue Help icon at the bottom of the Smokeless Range main screen. Or by going to Start/All Programs/Laser Ammo/Smokeless Range/Quick Start.

5. Plug laser tracking camera into USB 2.0 port on your computer and let the camera driver install.



 
6. Launch the DF-Series Camera software and activate the camera software with the provided license code and then calibrate the laser tracking camera.

*Internet connection recommended for software activation



7. Launch the Smokeless Range software and activate the software with the provided license code.

*Internet connection recommended for software activation.



8. Your Smokeless Range is now ready to use.
9. Visit www.calibersimulation.com/support.html or by going to Start/All Programs/Laser Ammo/Smokeless Range/Smokeless Range Support for more how-to videos and support help.

